

ALL CLASS FUSEBLOCK COVERS



Description

Littelfuse fuseblock covers protect personnel from accidentally coming into contact with energized parts. Covers are for use with various UL class fuseblocks. Please, review the ordering information for available covers.

Ordering Information

UL CLASS	FUSEBLOCK BASE PART NUMBER*	VOLTAGE	AMPERAGE	COVER PART NUMBER
Class T	LFT30030	300	30	LFT30030FBC
Class T	LFT30060	300	60	LFT30060FBC
Class T	LFT30100	300	100	LFT30100FBC
Class T	LFT60030	600	30	LFT60030FBC
Class T	LFT60060	600	60	LFT60060FBC
Class T	LFT60100	600	100	LT60100FBC
Class T	LFT60200	600	200	LT60200FBC
Class T	LFT60400	600	400	LT60400FBC
Class T	LFT60600	600	600	LT60600FBC
Class H/R	LFH25030 / LFR25030	250	30	LFH25030FBC
Class H/R	LFH25060 / LFR25030	250	60	LFH25060FBC
Class H/R	LFH25100 / LFR25100	250	100	LFH25100FBC
Class H/R	LFH60030 / LFR60030	600	30	LFH60030FBC
Class H/R	LFH60060 / LFR60060	600	60	LFH60060FBC
Class H/R	LFH60100 / LFR60100	600	100	LFH60100FBC
Class J	LFJ60030	600	30	LFJ60030FBC
Class J	LFJ60060	600	60	LFJ60060FBC
Class CD	LFC60060	600	60	LFC60060FBC

* Part number shown excludes reference to number of poles and terminal type

Specifications

Connection:	Snap to fuse body
Molded Base:	Black thermoplastic
Flammability Rating:	UL94 V-0
Approvals:	UL Listed (File No. E184929)
CSA Certified	(File No. 007316_0_000 Class 6225-01)

Features/Benefits

- Added safety to personnel
- Ventilated to avoid fuse derating
- Covers are reusable
- UL listed and CSA certified
- Available for Class T, Class H/R, Class J and Class CD

Fuseblock Information

For the most current fuseblock information or to find the appropriate fuseblock part number, visit

www.Littelfuse.com/fuseblocks

Web Resources


For other technical information, visit:

www.littelfuse.com/covers


ALL CLASS FUSEBLOCK COVERS

Dimensions in mm (inches)


600 V 60 A Class CD Fuseblock Cover

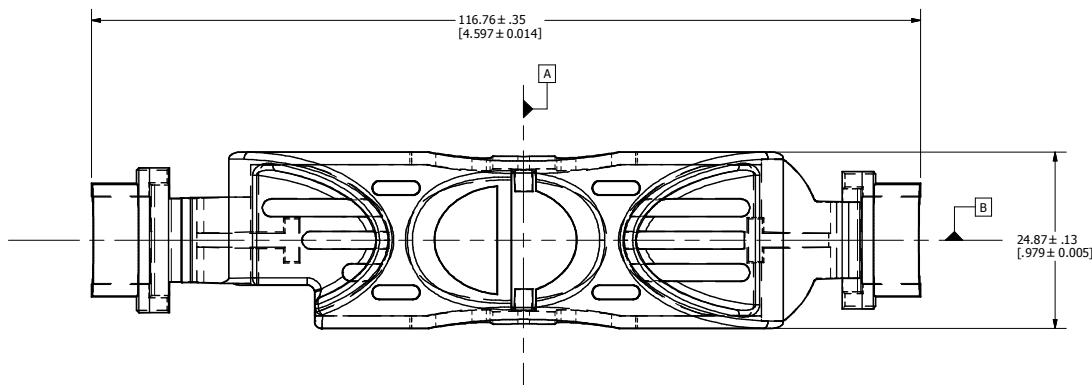

600 V 30 A Class H/R Fuseblock Cover

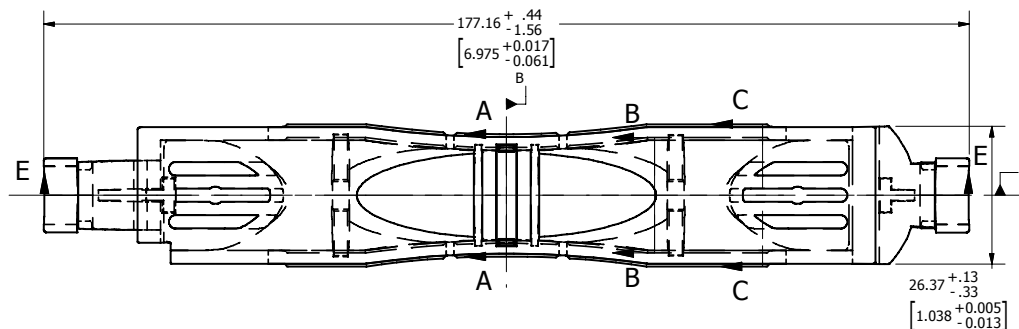


250 V 60 A Class H/R Fuseblock Cover

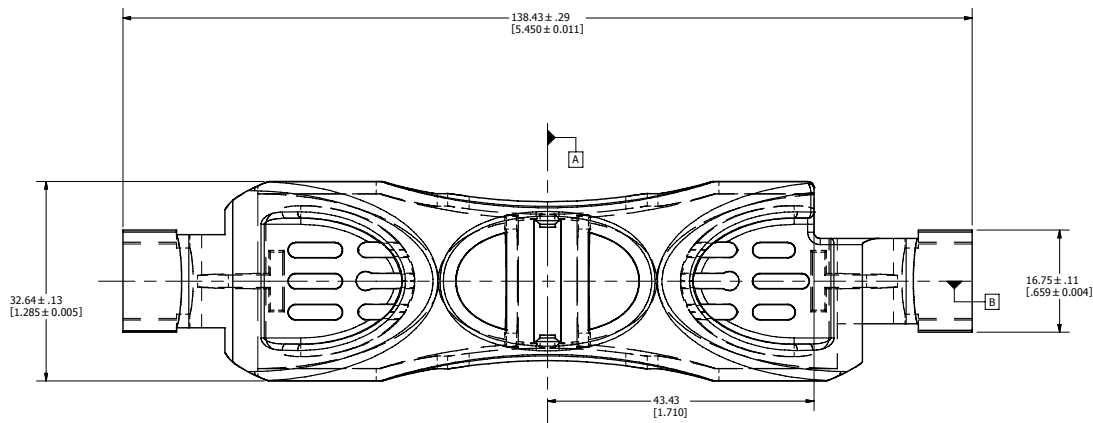


ALL CLASS FUSEBLOCK COVERS

Dimensions in mm (inches)


600 V 100 A Class H/R Fuseblock Cover

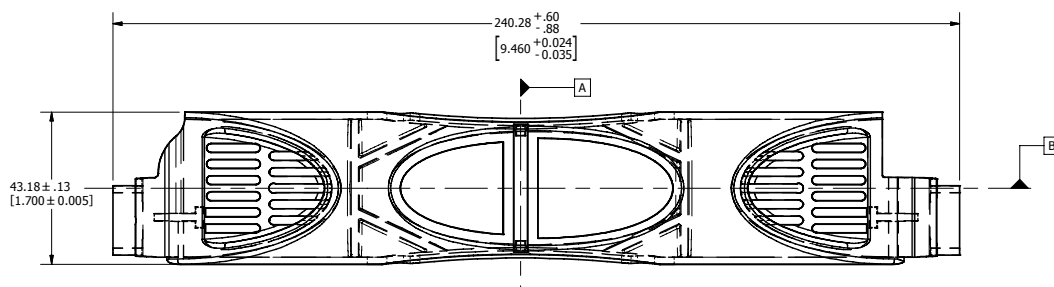

250 V 30 A Class H/R Fuseblock Cover

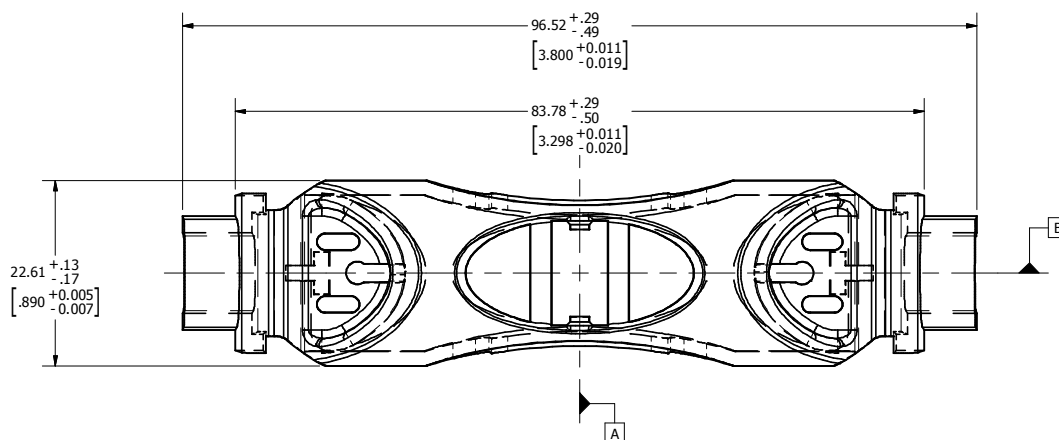


250 V 100 A Class H/R Fuseblock Cover

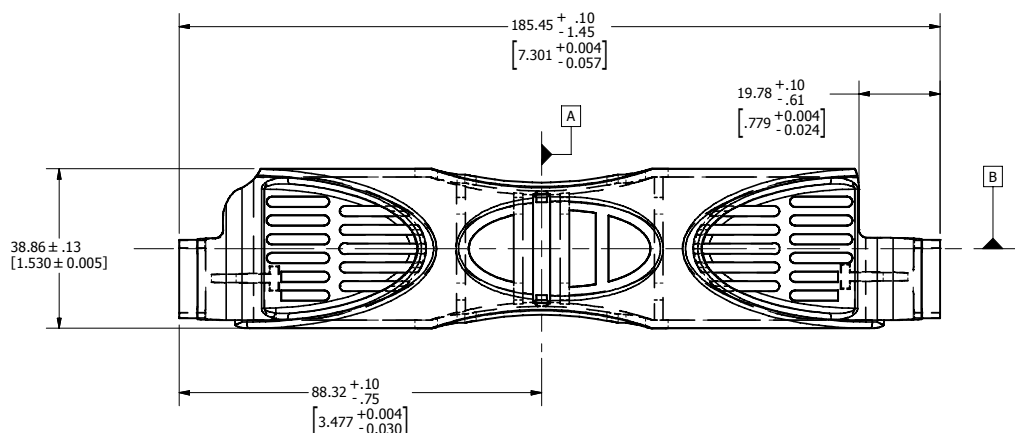


ALL CLASS FUSEBLOCK COVERS

Dimensions in mm (inches)


600 V 60 A Class H/R Fuseblock Cover

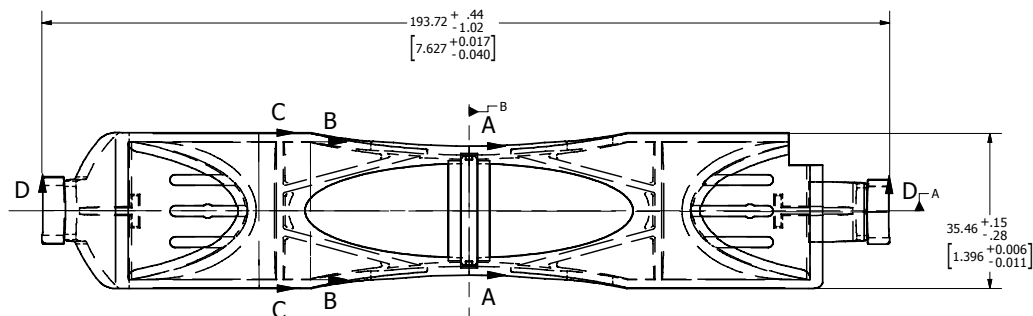

600 V 30 A Class J Fuseblock Cover

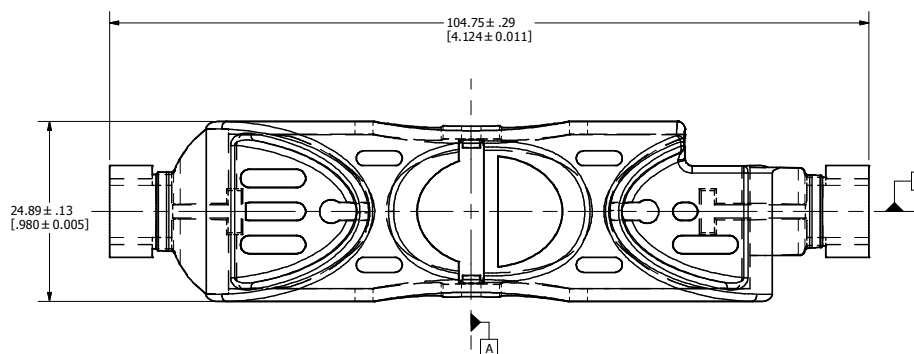


600 V 60 A Class J Fuseblock Cover

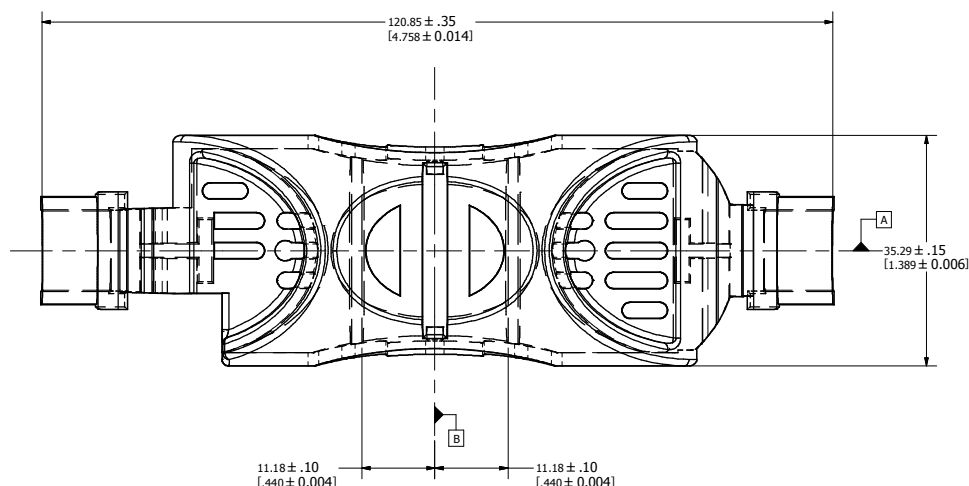


ALL CLASS FUSEBLOCK COVERS

Dimensions in mm (inches)


600 V 100 A Class J Fuseblock Cover

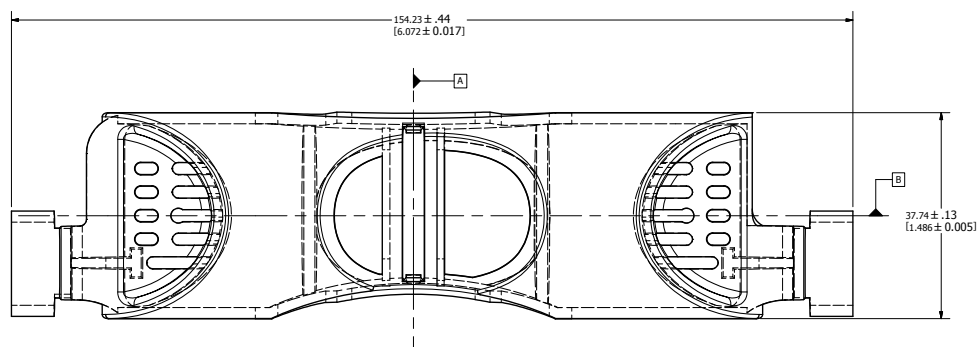

300 V 30 A Class T Fuseblock Cover

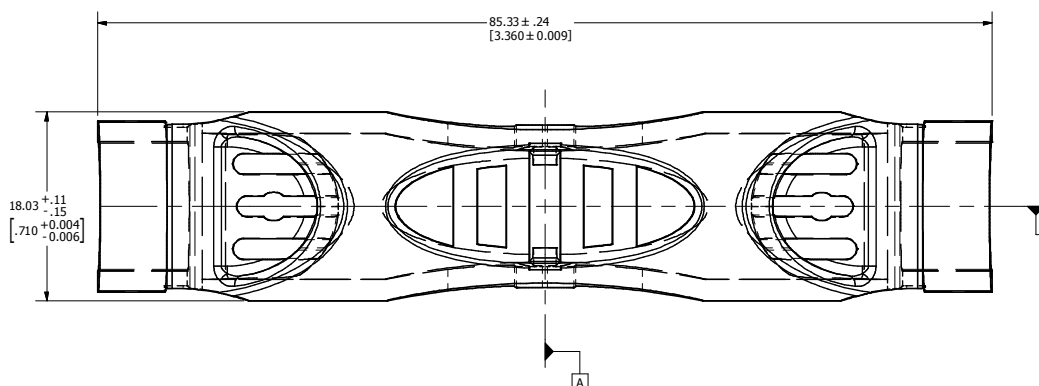


300 V 100 A Class T Fuseblock Cover

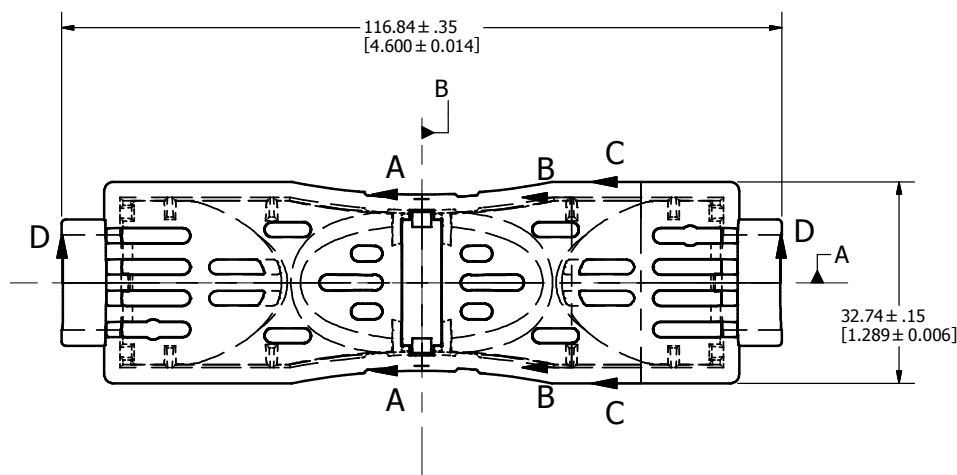


ALL CLASS FUSEBLOCK COVERS

Dimensions in mm (inches)


300 V 60 A Class T Fuseblock Cover

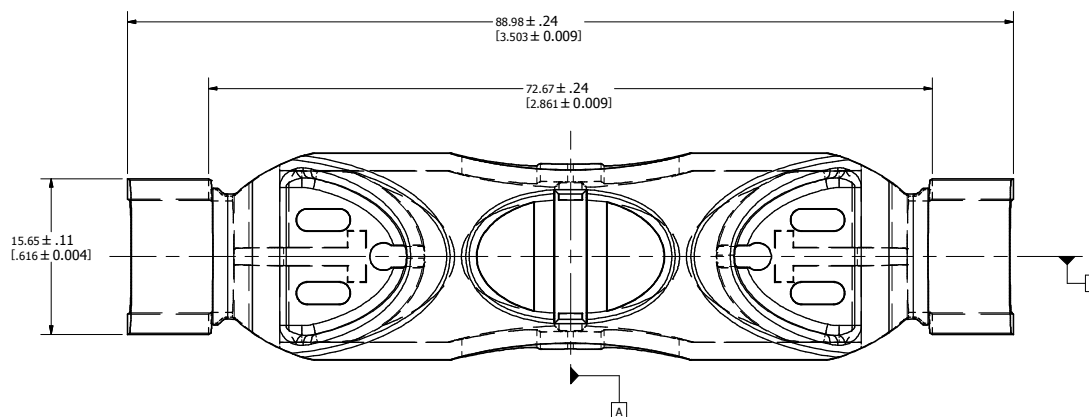

600 V 60 A Class T Fuseblock Cover

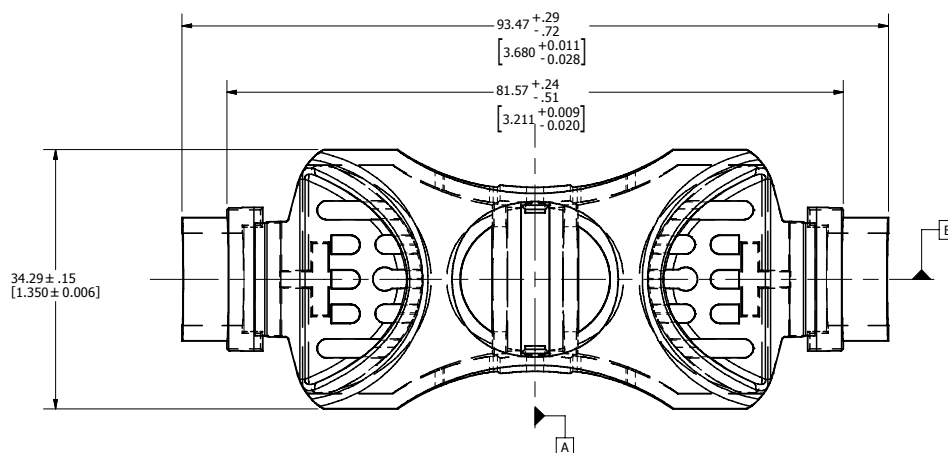


600 V 30 A Class T Fuseblock Cover

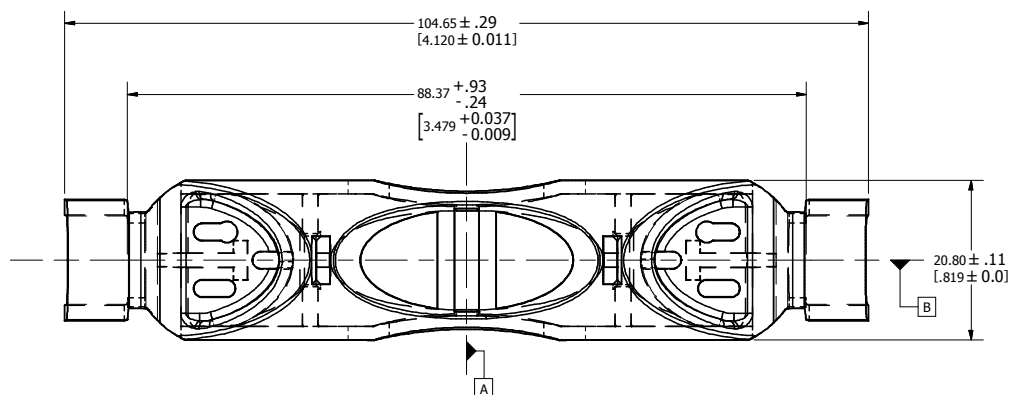


ALL CLASS FUSEBLOCK COVERS

Dimensions in mm (inches)


600 V 100 A Class T Fuseblock Cover

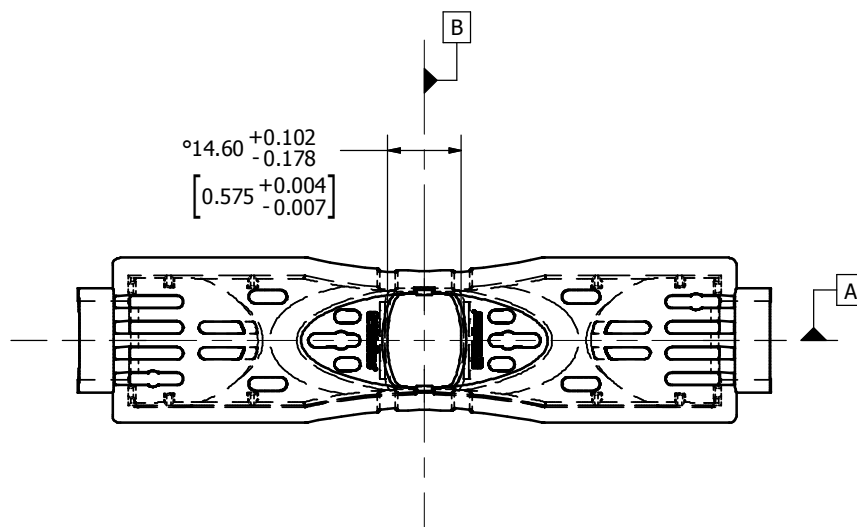

600 V 200 A Class T Fuseblock Cover

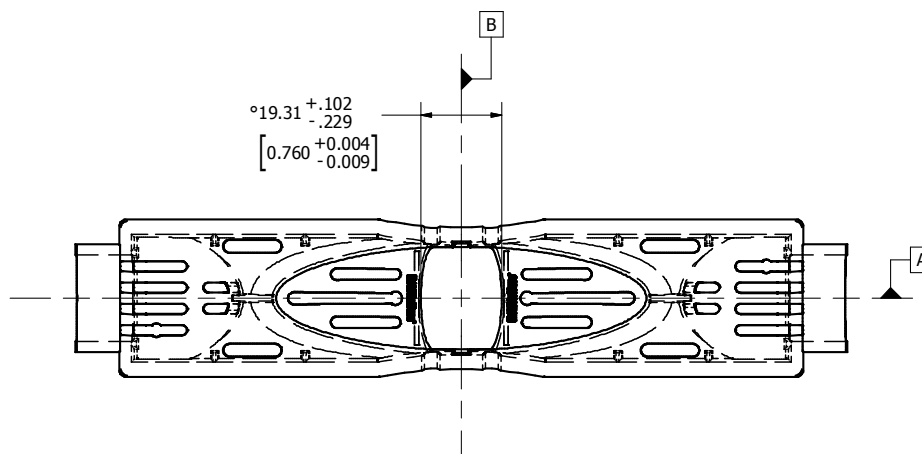

600 V 400 A Class T Fuseblock Cover

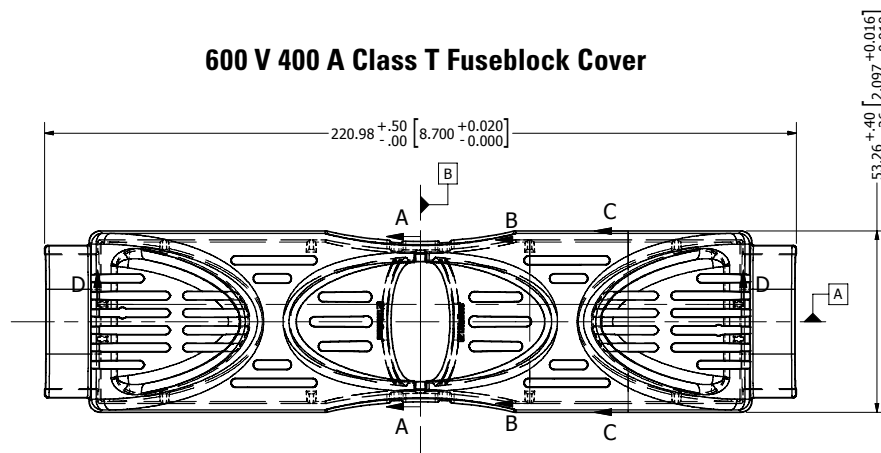

ALL CLASS FUSEBLOCK COVERS

Dimensions in mm (inches)

600 V 600 A Class T Fuseblock Cover

