

Replacement Parts

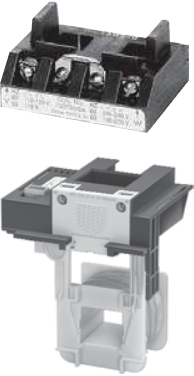
Starters and Contactors – DC Coils, Late Break Aux Contacts, Rectifiers, Contact Kits

Selection

Ordering Information

- 4th character of starter or contactor catalog number indicates model.
- DC Coils for Size 00-4 require Late Break Interlock.

DC Coils — For Class 14, 17, 18, 22, 25, 26, 30, 32, 40, 43

	Size	Model	Volts DC	Catalog Number	List Price \$
	00–2½	P U (ESP200)	12	75D73070R	
			24	75D73070S	
			32	75D73070T	
			48	75D73070U	
			125	75D73070V	
	3, 3½	P U (ESP200)	250	75D73070W	
			12	75D73251R	
			24	75D73251S	
			32	75D73251T	
			48	75D73251U	
	4	G U (ESP200)	125	75D73251V	
			250	75D73251W	
			48	75D70131U	
	4, 5	V (Vacuum)	125	75D70131V	
			250	75D70131W	
			23-26	3RT1966-5AB31	
			42-48	3RT1966-5AD31	
			110-127	3RT1966-5AF31	
			240-277	3RT1966-5AU31	

Note: For sizes 7 & 8 contactors the AC coils are used for DC see page 16-155.

Late Break Auxiliary Contacts

	Control Size	Model	Catalog Number	List Price \$
	00–4	P, G, S, T	49AB01LB	

Board for Size 8 Contactor

	Control Size	Model	Catalog Number	List Price
	8	H	49ZP1650	

Contact Kits – Single Pole Stationary and Movable Contacts, Contact Spring^①

Description	Size	Number of Poles in Kit	Model (4th position in part number)	Catalog Number	List Price \$
	Internal Aux Contact (00-1-¾)		P, U P, U P, U	75AF14 75BF14 75CF14	
	1	1	P, U	75DF14	
	1¾–1P		P, U	75EF14	
	2	1	P, U	75FP14	
	2½	1	P, U	75GP14	
	3	1	P, U	75HF14	
	3½	1	P, U	75IF14	
	4	1	G, T	75JG14	
	4 (Vacuum)	3 (Bottles)	V, C	3RT1964-6V	
	5	3	P	3RT1966-6A	
	5 (Vacuum)	3 (Bottles)	V, C	3RT1966-6V	
	6	3	P	3RT1976-6A	
Class 14, 17, 18, 22, 25, 26, 30, 32, 36, 37, 40, 43, 83, 84, 87, 88	6 (Vacuum)	3 (Bottles)	V, C	3RT1976-6V	
	7	3	H	49ZL750	
	8	3	H	49ZL1650	
14, 40					

Armature and Magnet Kits

Size	Catalog Number	List Price \$
00–2½	49AMSA2	
3–3½	49AMSA3	
4	49AMSA4	

^① On 3-phase controls, all 3-poles should be replaced - 3 kits required.